


Pedestal Attachment by Expansion Anchors

Tate Access Floors, Inc.
7510 Montevideo Road
Jessup, MD 20794
Tel (410) 799-4200
Fax (410) 799-4207

Tate[®]

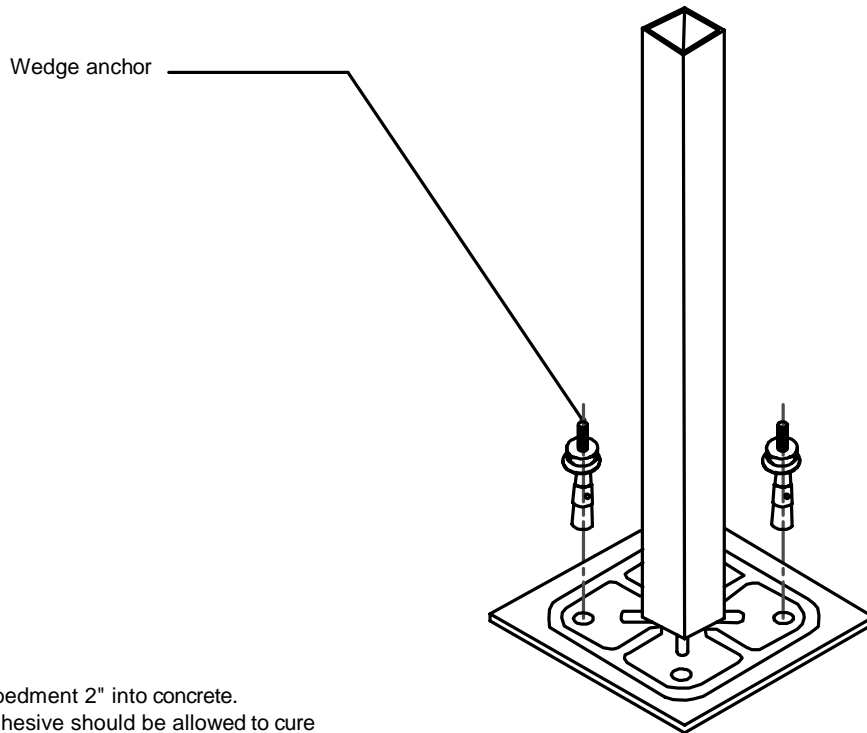

Notes:

Typical embedment 2" into concrete.
Pedestal adhesive should be allowed to cure
before installing anchors.

All Tate pedestals come standard with holes in
base plate for optional mechanical fastening.